



DIMENSIONS

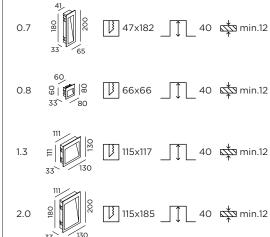



Driver must be powered off before connecting cables.

 
Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



MOUNTING INSTRUCTION

- Make a hole in the wall according to the prescribed dimensions of the fixture or the recessed housing.
- 2 POWER CONNECTION

Connect to 220-240V. Always use a driver according to the specifications of the LED module.

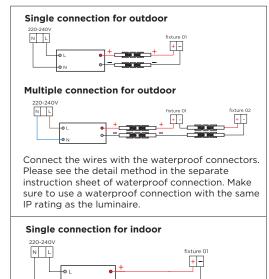



220-240V


A - Insert the fixture in the hole.


Multiple connection for indoor

- B Insert the fixture in the plasterkit.
- C Insert the fixture in the concrete housing.



INSTALLATION INSTRUCTIONS | NOVEMBER 2022

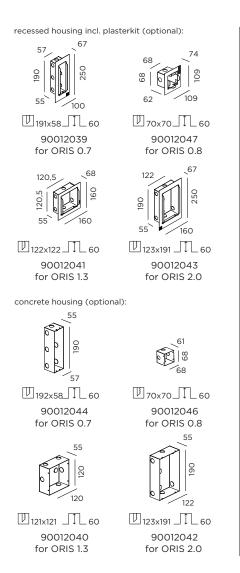

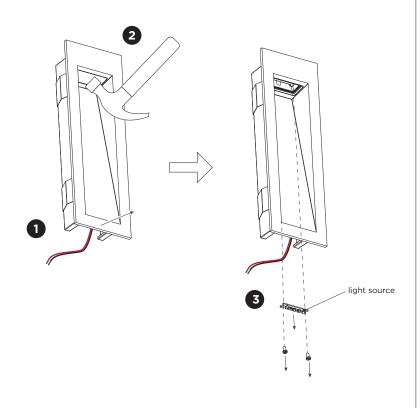



DISMOUNTING AND RECYCLING INSTRUCTIONS Light source

- Pull out the fixture and disconnect the wires between the fixture and the driver.
- Break the lens.
- Unscrew the light source, disconnect the wires and remove it.



The light source is not replaceable.



This luminaire contains a light source with the energy class G.

