

STRANGE

25-07-2016

1.0 LED

LED 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 90° 0,3m TE 35°/35° 355°

white texture 131161W_
black texture 131161B_

LIGHT COLOUR

2700K | >90CRI | 420-590lm | 18Vf 3
3000K | >90CRI | 470-640lm | 18Vf 5
1800-2850K | >90CRI | 320-440lm | 18Vf 9

ALWAYS USE

plaster kit 90017116
for power supplies see our catalogue

1.0 PAR16

PAR16 max. 35W | GU10 | 220-240VAC | 50-60Hz

CE IP20 90° 0,9m 35°/35° 355°  DO NOT COVER

white texture 131120W0
black texture 131120B0


ALWAYS USE

plaster kit 90017116

OPTIONAL

for PAR16 lamps see our catalogue



plaster kit (has to be ordered separately)





1.0 LED

1.0 PAR16




①



②

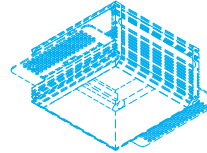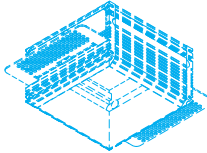


④

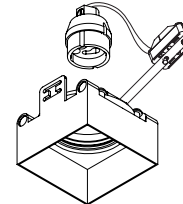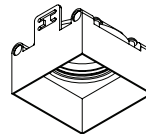

DIMENSIONS

1.0 LED



1.0 PAR16




MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the upper part of the fixture into the ceiling and plaster the borders seamlessly


POWER CONNECTION

- ③ SERIAL CONNECTION - for LED


Always use **POWER SUPPLY** according to the specifications of the LED-module



PARALLEL CONNECTION - for PAR16



- ④ Insert the fixture in the upper part. Place the LED-module or PAR16 lamp and fix with spring.
- ⑤ SAFETY DISTANCE FOR HALOGEN LAMPS

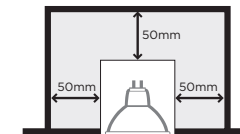

WEVER & DUCRÉ
LIGHTING

www.weverducre.com

INSTALLATION
INSTRUCTIONS