


# Qbini trimless frame (installation)


141800XX 141801XX 141802XX 141803XX

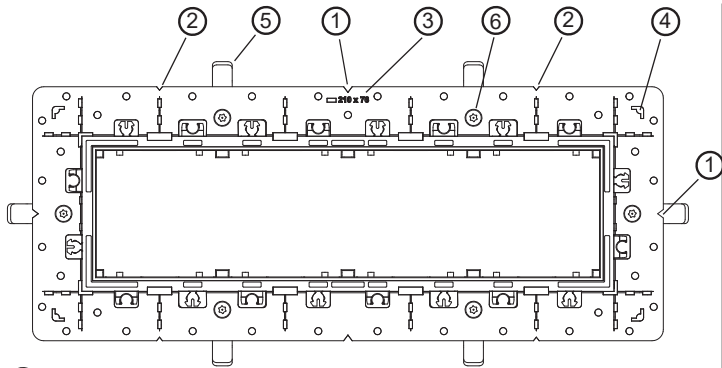

- ① MIDDLE MARK
- ② CENTERHOLE MARKS (LEFT & RIGHT)
- ③ RECTANGULAR CUT-OUT DIMENSIONS
- ④ RECTANGULAR CUT-OUT TEMPLATE MARKS
- ⑤ CLAMPING PLATES FOR MOUNTING INTO CEILING
- ⑥ SCREWS TO TIGHTEN CLAMPING PLATES DURING INSTALLATION


MARKS CAN BE USED TO DEFINE CENTER HOLES OR CUT-OUT BORDERS

MIN HEIGHT TO TILT-IN DRIVER AFTER INSTALLATION  
**! NOT POSSIBLE FOR 141800XX !**

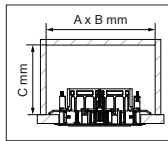


MINIMAL BUILD-IN VOLUME: A x B x C



		225x155x75	160x155x130
		165x155x75	190x155x130
		205x155x75	220x155x130
		245x155x75	250x155x130

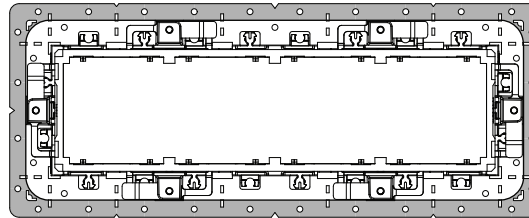






USE PLASTERBOARD GLUE ALL AROUND FLANGE BORDER (DO **NOT** USE SILICONE ADHESIVE)

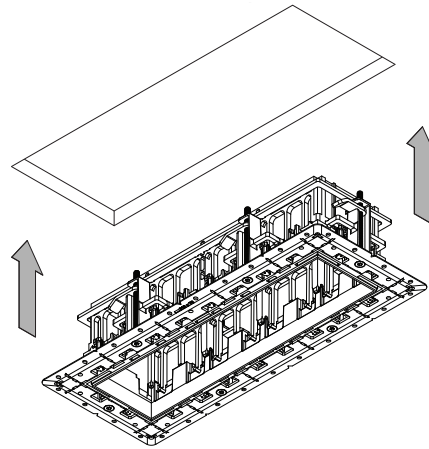

CEILING THICKNESS BETWEEN 2mm - 26mm

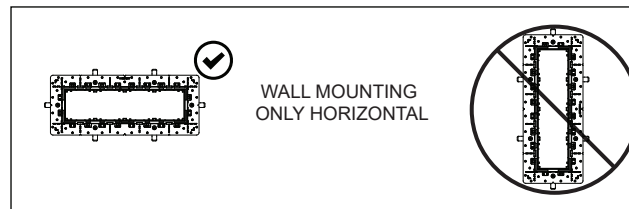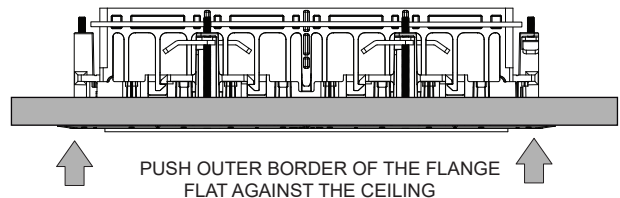

TURN THE SCREW TO MOVE CLAMP UP/DOWN

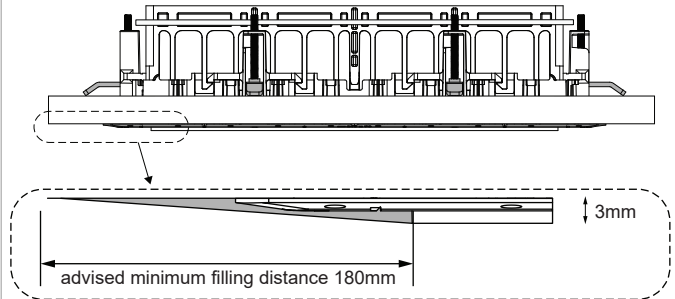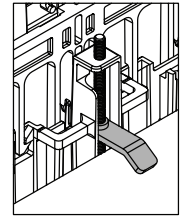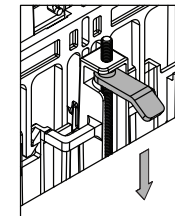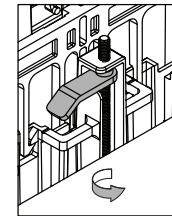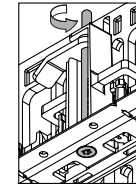

PROTECT INSIDE OF THE FRAME FROM FILLER (USE INCLUDED CARDBOARD TEMPLATE)

