
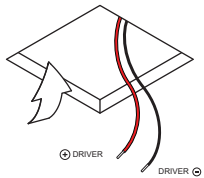
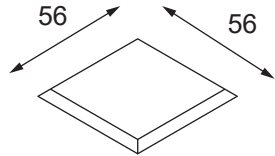



Qbini Frame 1X

141710XX





USE INCLUDED CARDBOARD TEMPLATE TO CUT SQUARE HOLE

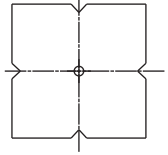


!
CONNECT LED DRIVER TO POWER SUPPLY AND PUT INTO THE CEILING THROUGH HOLE BEFORE INSTALLING FRAME

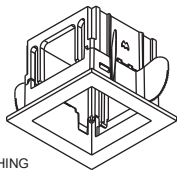

INSTALL FRAME BY PUSHING IN RECESSED HOLE

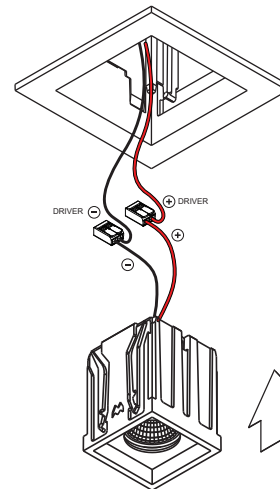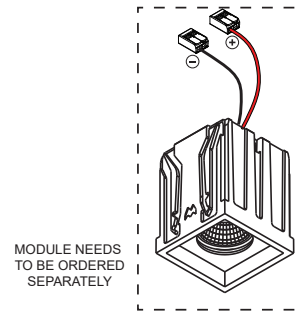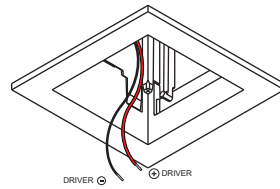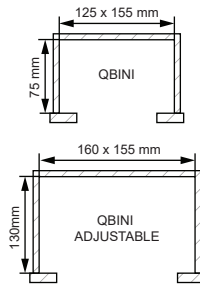


FIRST LATCHED POSITION

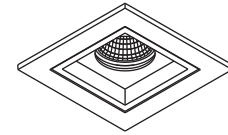


①

PUSH module UP for SECOND LATCHED POSITION

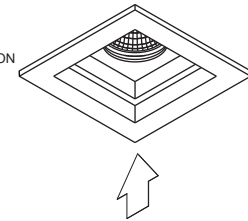


②

PUSH module further UP for RELEASE POSITION

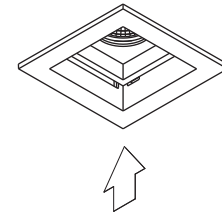

③

PULL module DOWN to remove

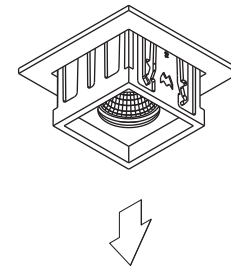

④

