GUBI

ASSEMBLY INSTRUCTIONS

for

Howard Chandelier
4-Arm Short

GUBI

ASSEMBLY INSTRUCTIONS

CONTENTS

x2   x2   x1   x1   x4   x1   x4
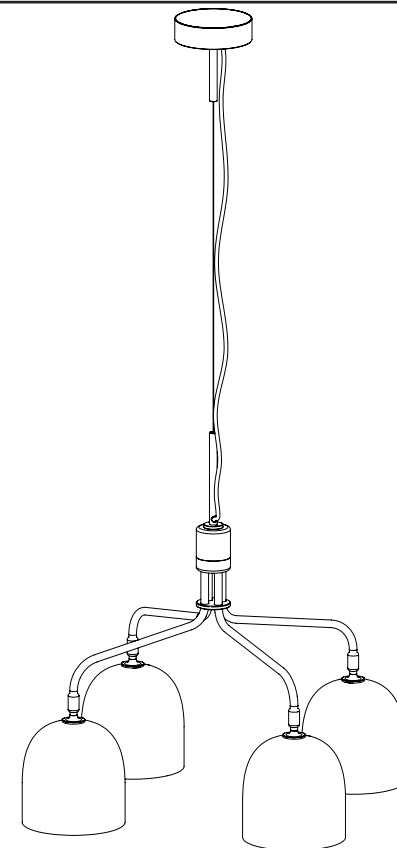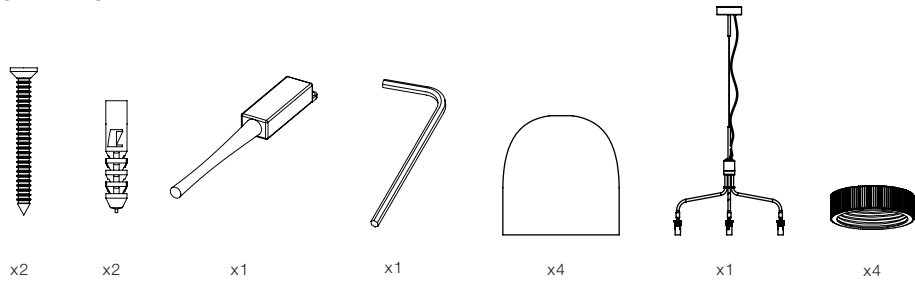
1.

Mount the ceiling bracket with the two supplied wood screws.

2.

Insert the hanging wire and electrical cable through the canopy.

3.

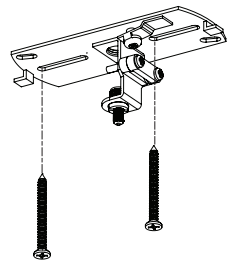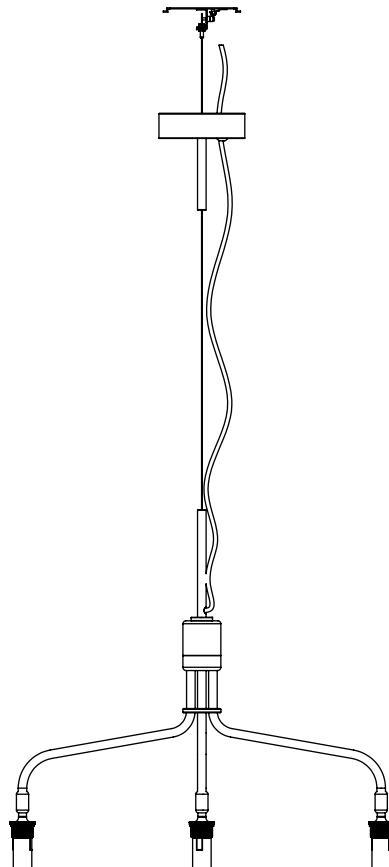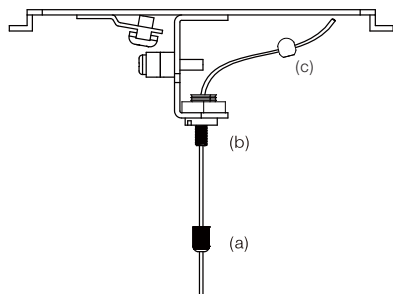Loosen the suspension terminal sleeve (a) and adjust the height of the lamp by pulling the wire through the suspension terminal (b). Secure the wire by tightening the set screw on the metal ball (c) and re-attach the sleeve. Coil or cutting the surplus wire. Adjust the length of the electrical cord, leaving ample slack.
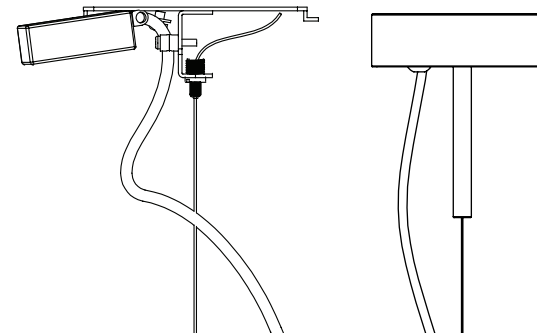
(c)

(b)

(a)

4.

Connect lamp L and N wires to mains wires in the supplied screw terminal and place it inside the canopy.

Lamp wire.

Mains wire.
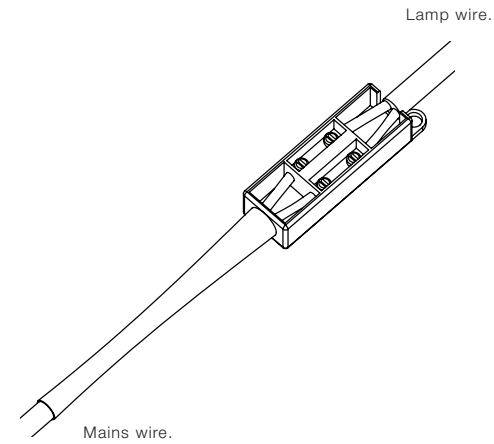
5.

Secure the lamp wire in the strain relief and attach the canopy to the ceiling bracked by rotating it by approximately 5-20 degrees.

6.

Assemble the shades onto the base by using the supplied mounting rings