Qbini Frame 2X

141720XX

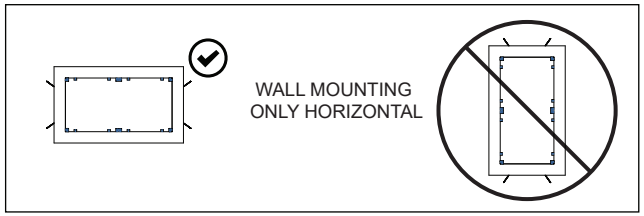

USE INCLUDED CARDBOARD TEMPLATE
TO CUT SQUARE HOLE

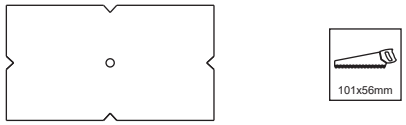

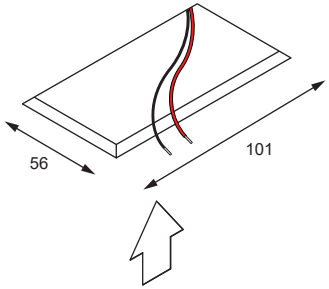

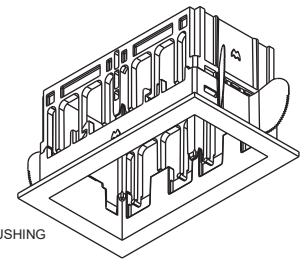

INSTALL FRAME BY PUSHING
IN RECCESED HOLE

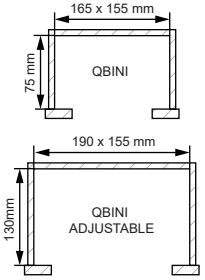

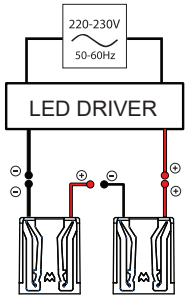

CONNECT LED MODULES IN SERIES

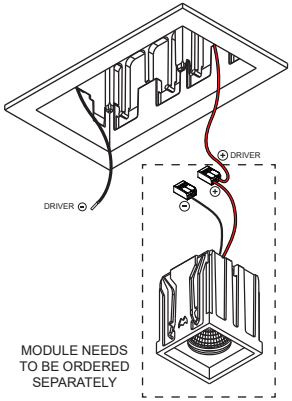

MODULE NEEDS
TO BE ORDERED
SEPARATELY

PUSH IN

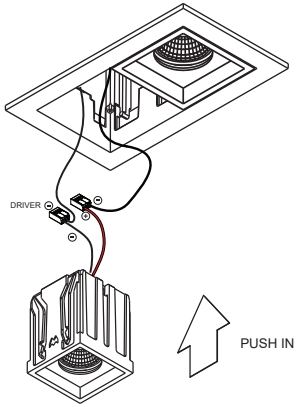

PUSH IN

FIRST LATCHED POSITION

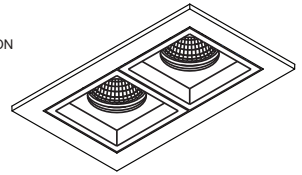

1

PUSH module UP for
SECOND LATCHED POSITION

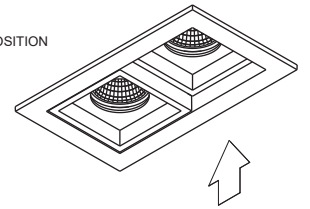

2

PUSH module further UP for
RELEASE POSITION

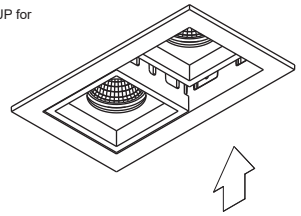

3

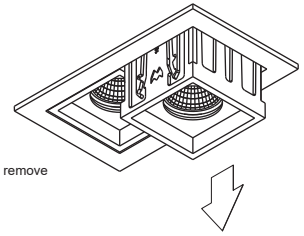

4

PULL module DOWN to remove

NO
UV / IR

V3- 21/12/2017